 



TOM & BASS DRUM CASES

CASE	A	A / FOAM	B	B / FOAM	C*	D	E
8" Tom Case	9.50	9.00	11.25	10.75	10.00	10.00	4.50
10" Tom Case	11.50	11.00	13.50	13.00	12.00	11.50	4.50
12" Tom Case	13.25	12.75	13.75	13.25	14.00	12.25	4.50
13" Tom Case	14.75	14.25	17.75	17.25	15.25	12.00	4.50
14" Tom Case	15.50	15.00	18.25	17.75	16.00	13.00	4.50
15" Tom Case	16.00	15.50	19.50	19.00	17.00	16.25	5.00
16" Tom Case	17.00	16.50	21.00	20.50	18.00	19.00	5.00
18" Tom Case	19.50	19.00	22.75	22.25	19.50	19.00	5.00
18" Marching Bass Case	19.50	19.00	22.75	22.25	19.50	17.50	5.00
18" Bass Case	21.00	20.50	25.50	25.00	22.00	20.00	5.00
20" Marching Bass Case	21.00	20.50	25.50	25.00	22.00	20.25	5.00
20" Bass Case	22.50	22.00	27.00	26.50	23.50	21.00	5.00
20" Extended Bass Case	22.50	22.00	27.00	26.50	23.50	25.00	5.00
22" Bass Case	25.00	24.50	29.50	29.00	26.00	21.00	5.00
22" Extended Bass Case	25.00	24.50	29.50	29.00	26.00	26.00	5.00
24" Bass Case	27.00	26.50	33.00	32.50	28.00	21.00	5.00
24" Extended Bass Case	27.00	26.50	33.00	32.50	28.00	26.75	5.00
26" Bass Case	29.00	28.50	34.50	34.00	28.50	21.25	5.00
28" Bass Case	30.25	29.75	36.50	36.00	31.00	19.50	5.00
30" Bass Case	31.75	31.25	39.50	39.00	32.50	21.00	5.00
32" Bass Case	40.75	40.25	40.75	40.25	35.00	20.50	5.00

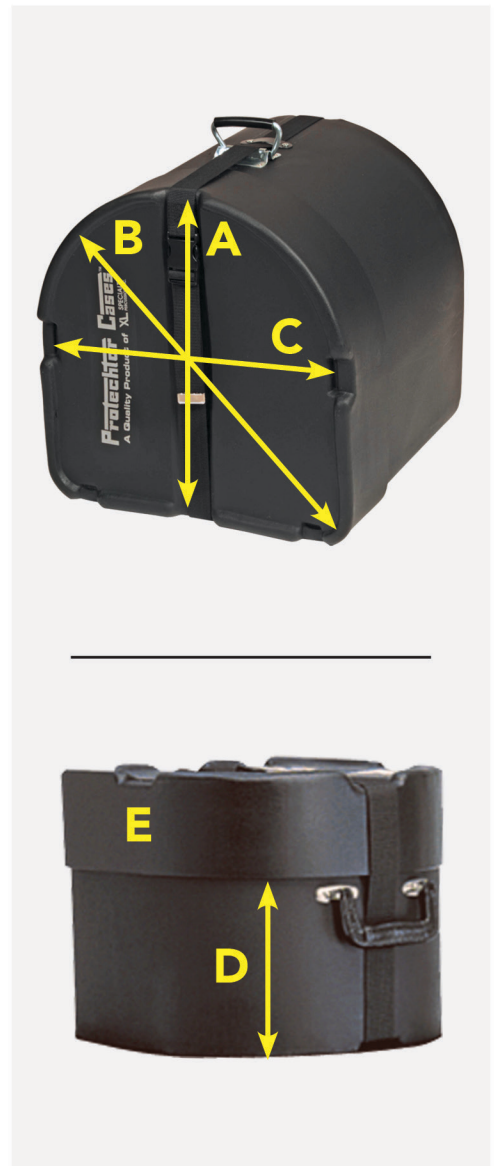


SNARE & TIMBALE CASES

CASE	A	A / FOAM	B	B / FOAM	C*	D	E
3", 4", 5" x 14" Snare	16.00	15.50	21.00	20.50	16.00	7.50	6.00
6.5" x 14" Snare Case	16.00	15.50	21.00	20.50	16.00	7.50	6.00
8" x 14" Snare Case	16.00	15.50	21.00	20.50	16.00	8.50	7.50
14" Timbale Case	17.00	16.50	22.50	22.00	17.00	14.25	5.75
15" Timbale Case	17.00	16.50	22.50	22.00	17.00	14.25	5.75
14" Marching Snare Case	17.00	16.50	22.50	22.00	17.00	14.25	5.75
15" Marching Snare Case	17.00	16.50	22.50	22.00	17.00	14.25	5.75
Large Marching Snare	19.50	19.00	23.25	22.75	19.50	17.50	5.75

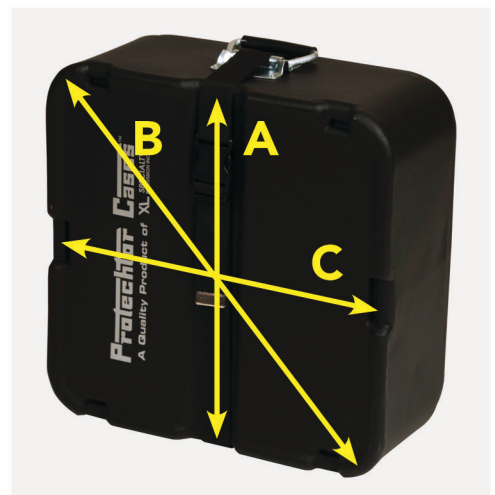 



SNARE, TOM & BASS DRUM CASES

CASE	A	B	C*	D
13" Snare Case	15.50	15.75	13.75	5.00
14" Snare Case	16.00	16.75	8.75	5.00
8" Tom Case	12.00	10.75	9.25	3.50
10" Tom Case	14.00	13.00	10.50	4.50
12" Tom Case	15.50	14.75	11.50	4.50
13" Tom Case	16.00	15.75	13.75	4.50
14" Tom Case	17.00	16.75	14.75	4.50
15" Tom Case	18.50	17.50	16.75	5.00
16" Tom Case	22.50	20.75	17.50	5.00
18" Tom / Bass Case	23.75	22.75	26.75	5.00
20" Bass Case	25.50	24.50	26.00	5.00
22" Bass Case	26.75	26.00	26.75	5.00
24" Bass Case	28.50	27.00	26.75	5.00
10/12 Combo Case	15.50	14.50	24.00	5.00
12/13 Combo Case	16.50	15.75	25.50	5.00

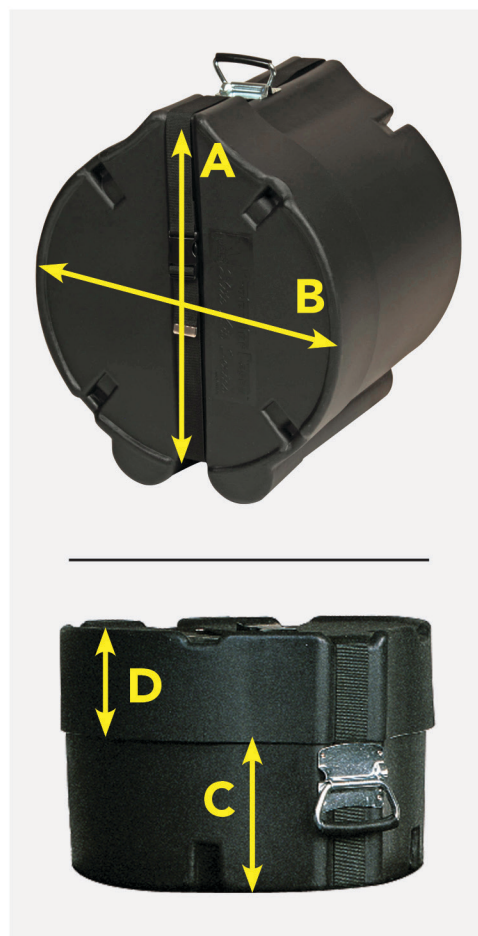 

HARDWARE & ACCESSORY CASES

CASE	A	B	C*	D	E**
300 Accessory Case	19.00	45.00	10.00	4.00	6.00
303 Accessory Case	17.00	17.00	29.00	5.75	
304 Series Compact Accessory Cases	16.00	35.00	12.00	5.00	
308 Series Super Compact Accessory Cases	14.00	30.00	11.50	5.00	
400 Series Accessory / Keyboard Cases	16.00	45.00	7.00	7.00	

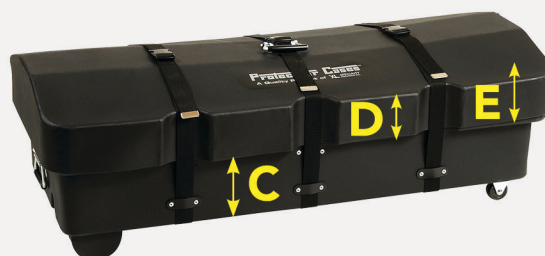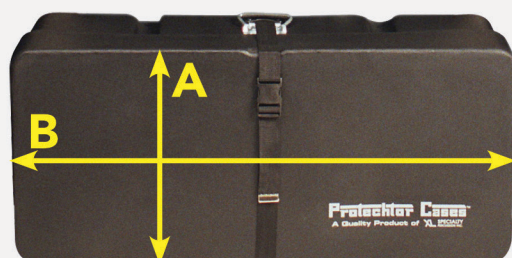  

**Measurement (E) is for the The 300 Series Accessory Case which has a beveled top and gives the maximum height of the bevel.